



1.Firstly, read Benz lock data, calculate the key.


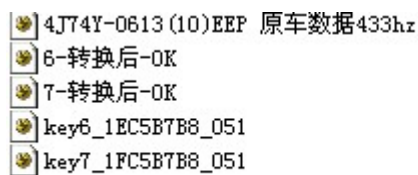


2.Use Benz BIN format tool to transform the calculated key. After that, save the file.



用奔驰 BIN 格式工具把计算好的钥匙转换好后保存好文件

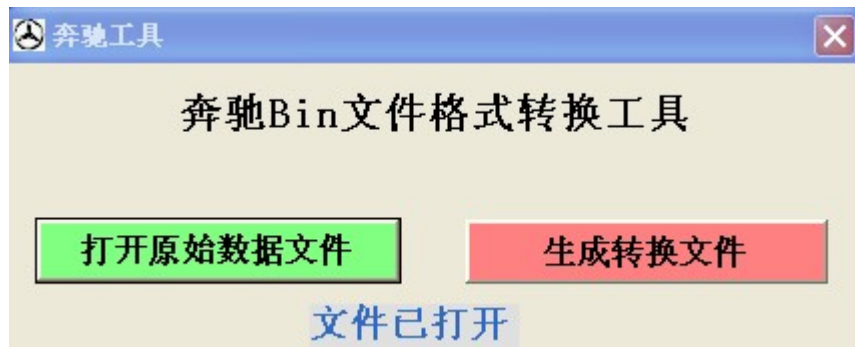


Then open this software and set USB interface.

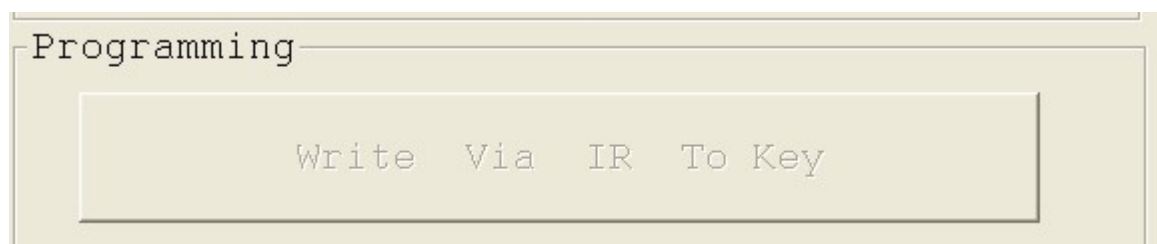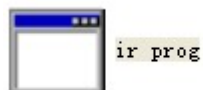


After setting, this place is black, click programming.

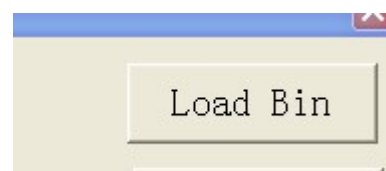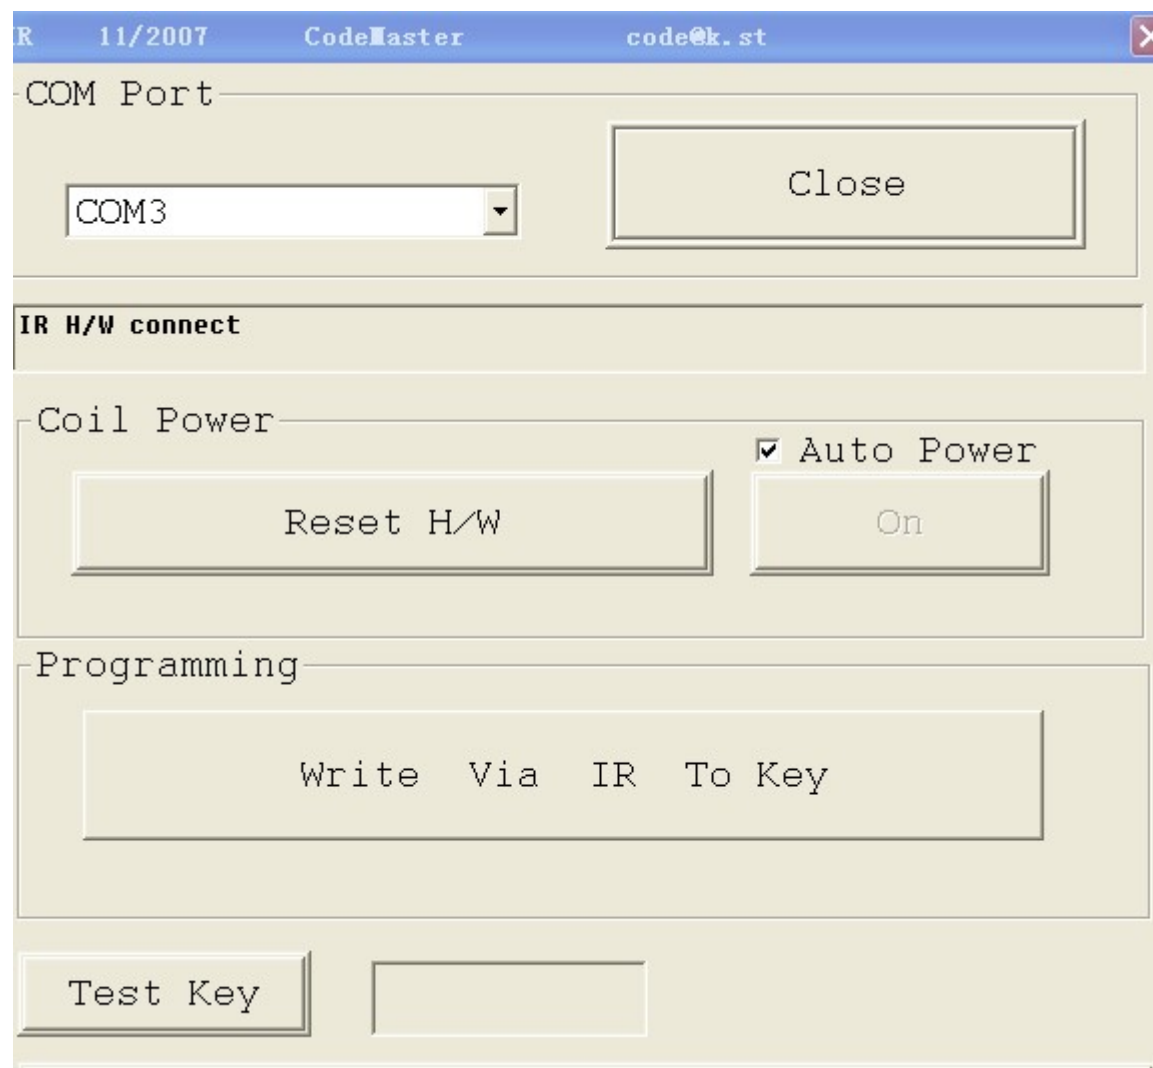


Open the file.

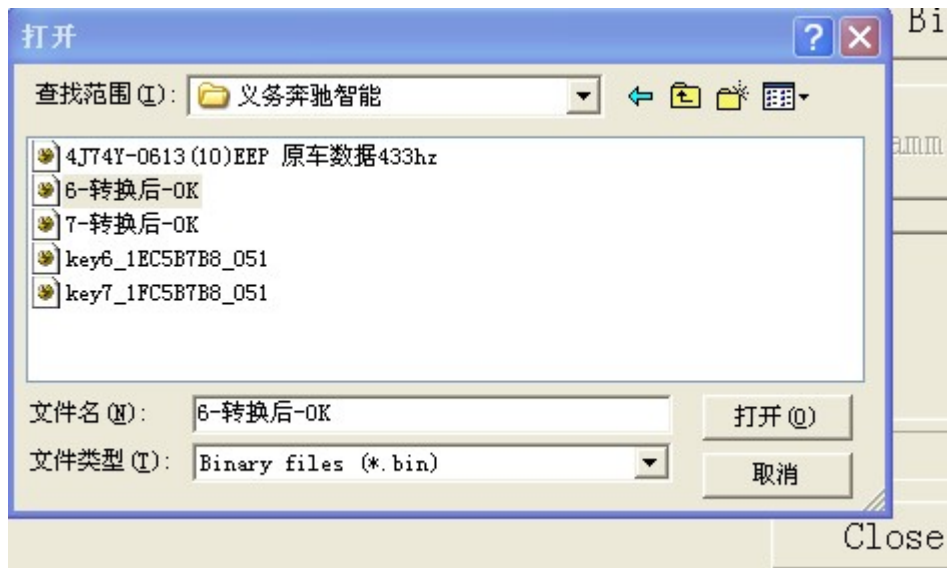

Open the transformed data to be written.

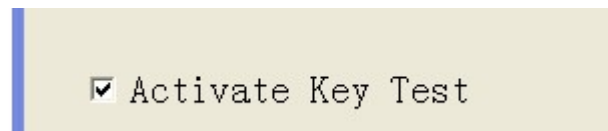


Click activate key test.

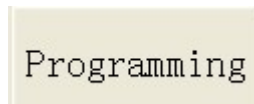


Last byte set to limiter value (11h)



When the blue bar is full, it shows that the key is new and never used.

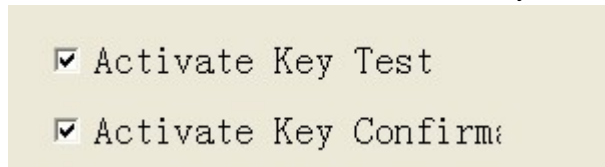

Then click activate key test and activate key confirmation, then it will program.

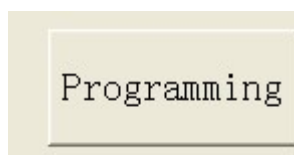

Last byte set to limiter value (11h)



When the blue bar is full, it prompts key programming is complete, turn on the ignition switch.